

# Ulti MATE



**BASE CABINET**  
**Model Number # GA-04**

**Heavy Duty, Three Drawer, One Deep Base Cabinet**

**PLEASE DO NOT TAKE THIS PRODUCT BACK TO THE STORE!**

Most likely, stores do not stock spare parts and cannot help. In the event that parts are missing.

**PLEASE CALL: 800-344-7005**

## **ASSEMBLY INSTRUCTIONS**

Bladez Corp. | Ultimate Garage - 20155 Ellipse - Foothill Ranch, CA 92610  
949.206.8155 (V) - 949.206.0013 (F)

# PARTS LIST

# Ulti MATE




## BASE CABINET MODEL #GA-04


Using the Parts List below, check to make sure all parts are included. Instructions will reference Part Letters found in this list. In the event that parts are missing or damaged.

**PLEASE CALL: 800-344-7005**


### TOOLS NEEDED FOR ASSEMBLY

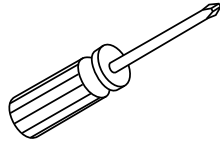

Phillips Screw Driver

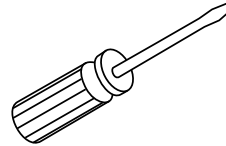

Flat Screw Driver

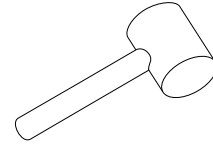

Rubber Mallet

#	DESCRIPTION	QTY	IMAGE
a	Side Panel (RIGHT)	1	
b	Side Panel (Left)	1	
c	Bottom Panel	1	
d	Top Work Surface	1	
e	Back Panel	1	
f	Large Drawer Face	1	
g	Drawer Face	2	
h	Small Drawer (BACK)	2	

#	DESCRIPTION	QTY	IMAGE
i	Small Drawer (RIGHT)	2	
j	Small Drawer (LEFT)	2	
k	All Drawers (BOTTOM)	3	
l	Large Drawer (BACK)	1	
m	Large Drawer (RIGHT)	1	
n	Large Drawer (LEFT)	1	


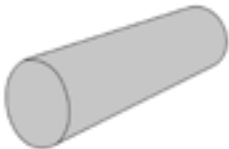



# PARTS LIST Ulti MATE


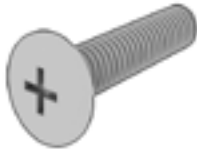








**BASE CABINET MODEL #GA-04**

Using the Parts List below, check to make sure all parts are included. Instructions will reference Part Letters found in this list. In the event that parts are missing or damaged.


**PLEASE CALL: 800-344-7005**

#	DESCRIPTION	QTY	IMAGE
aa	Screw (4.5 x 42mm)	16	
bb	Wooden Dowel	4	
cc	Cam	16	
dd	Metal Dowel	16	
ee	Foot	4	

#	DESCRIPTION	QTY	IMAGE
ff	Pull	3	
gg	Screw (M5 x 25mm)	6	
hh	Spring Washer	6	
ii	Corner Support	4	
jj	Screw	4	
kk	Touch-up Paint	1	
ll	Caster	1	
mm	Screw (4.5 x 16mm)	4	


## BEFORE YOU BEGIN


CAM STYLE FASTENERS ARE USED THROUGHOUT THE ASSEMBLY OF THIS CABINET.  
ASSEMBLE ALL CAMS AS SHOWN BELOW.

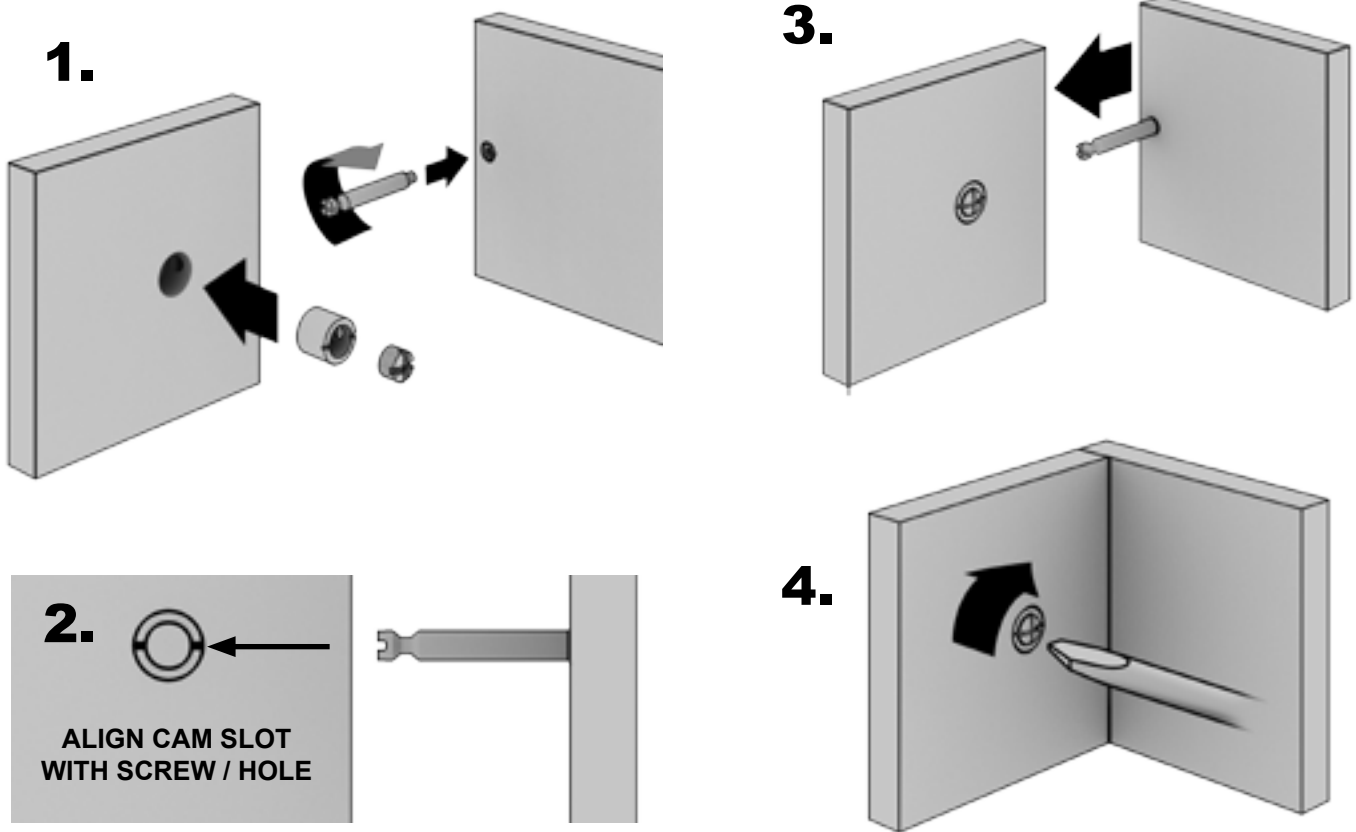


## WHEN YOU FINISH





ADDING CORNER SUPPORTS TO THE BACK WILL GREATLY  
INCREASE THE STRENGTH OF YOUR CABINET.

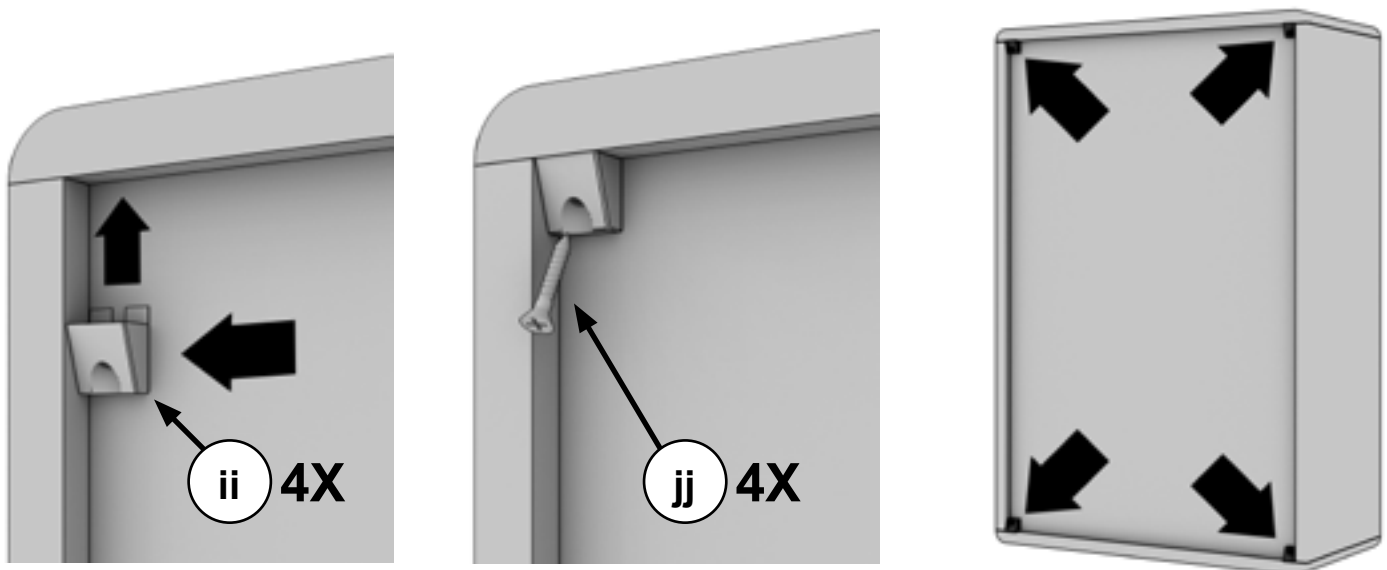

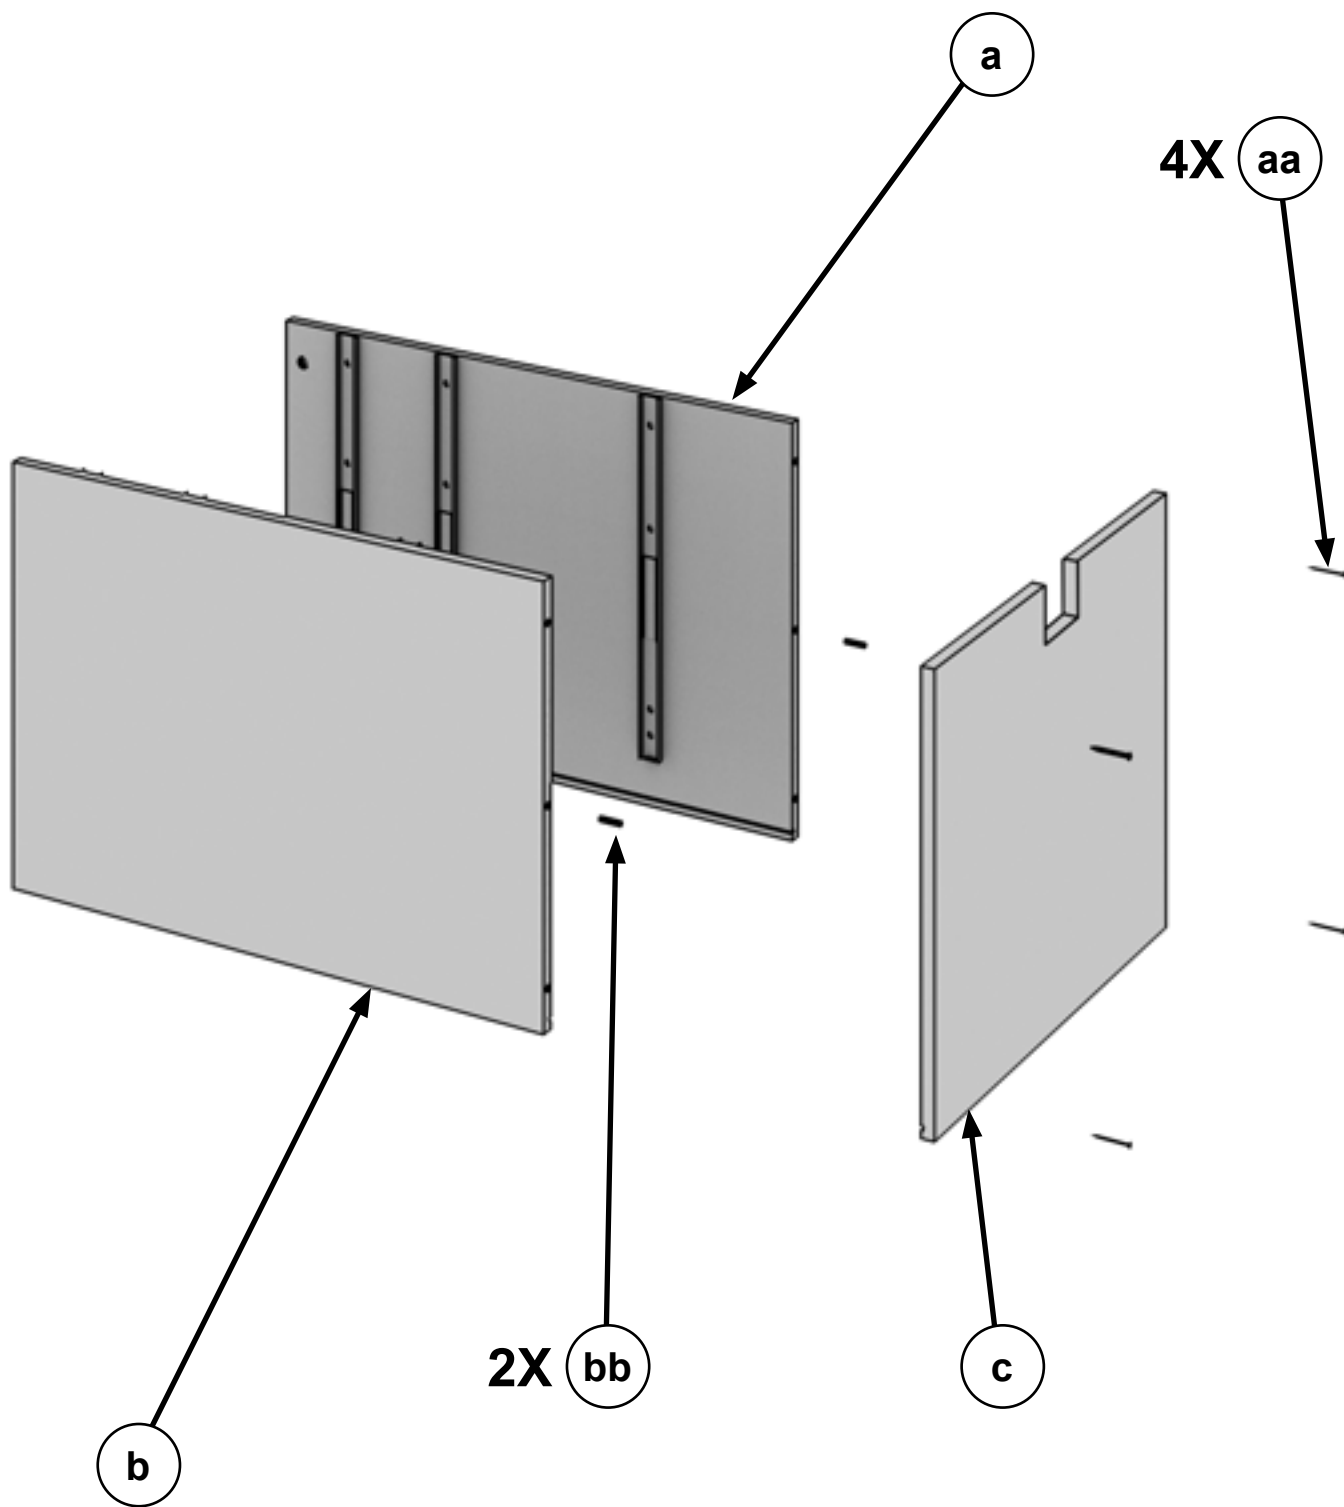


## STEP 2

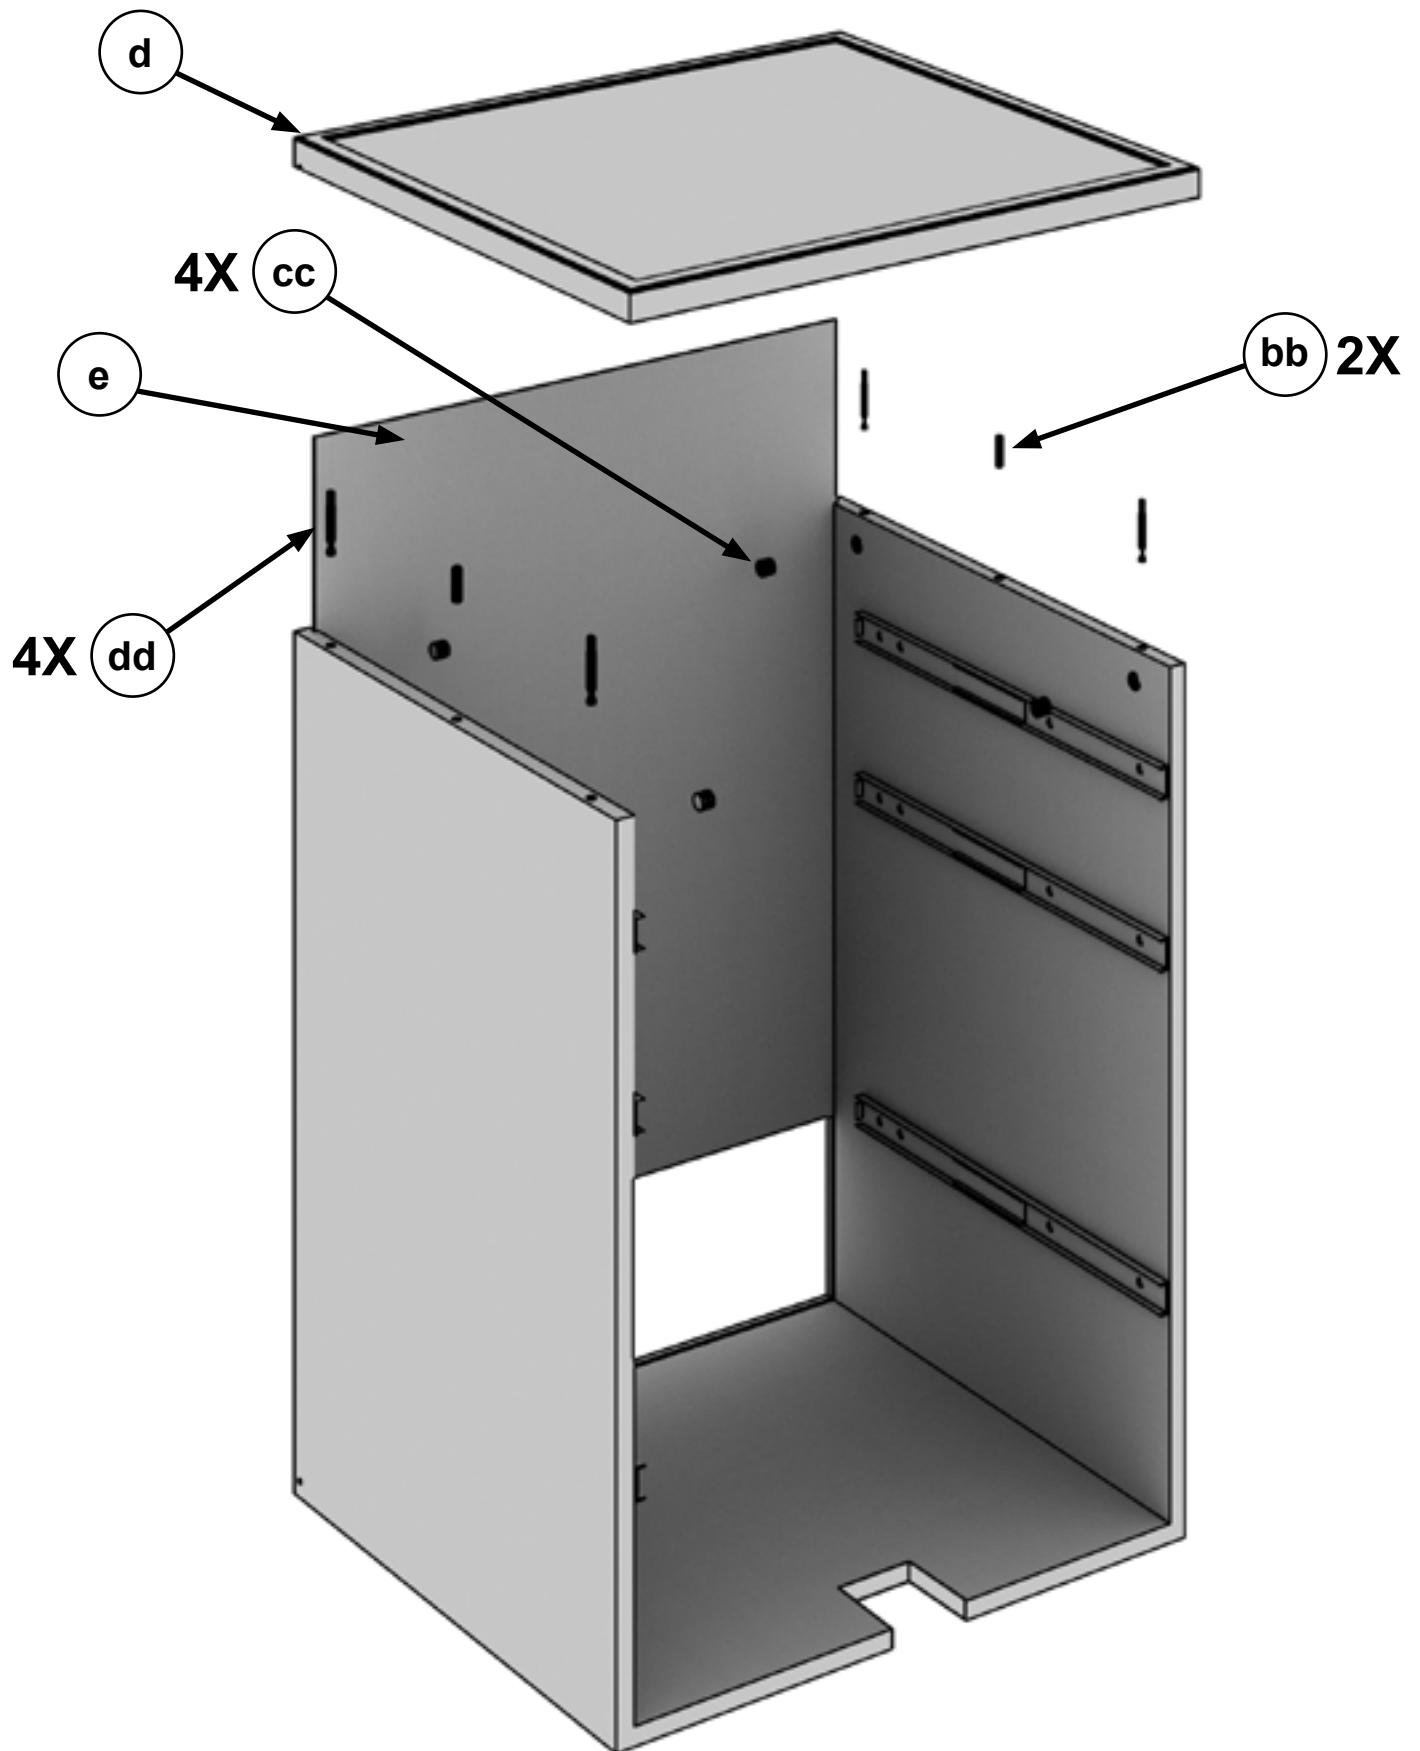

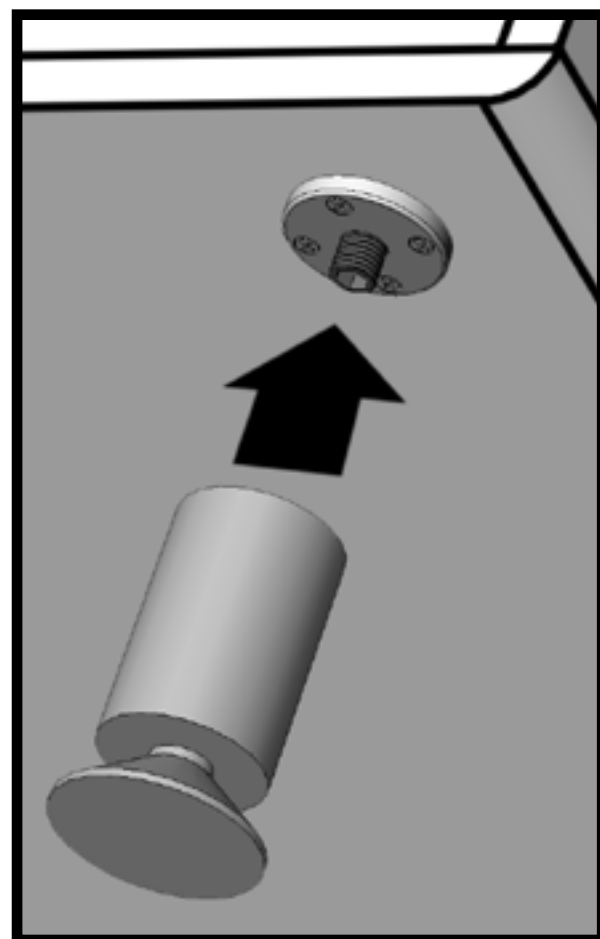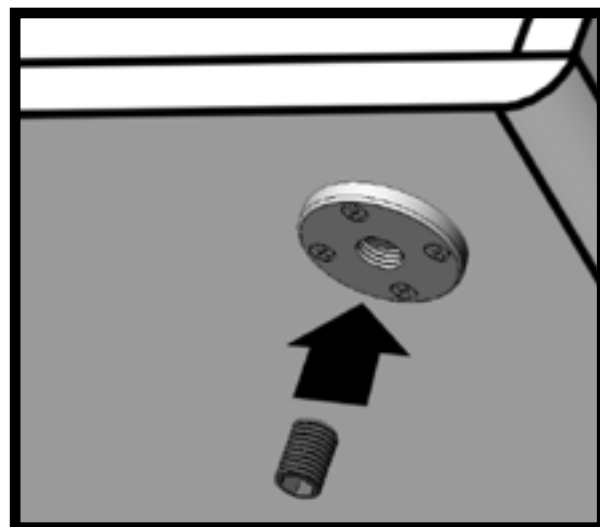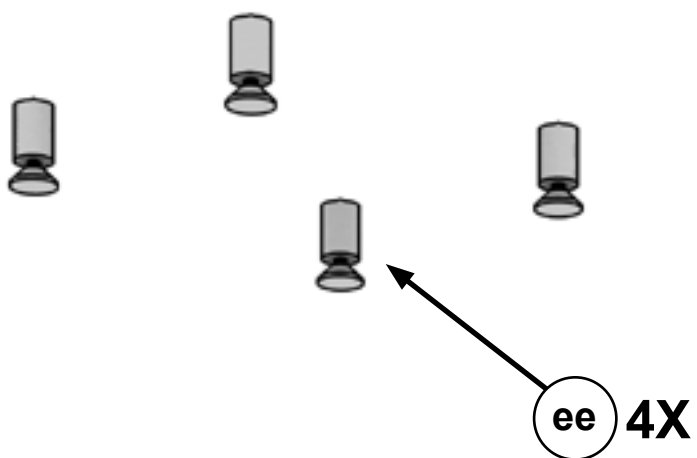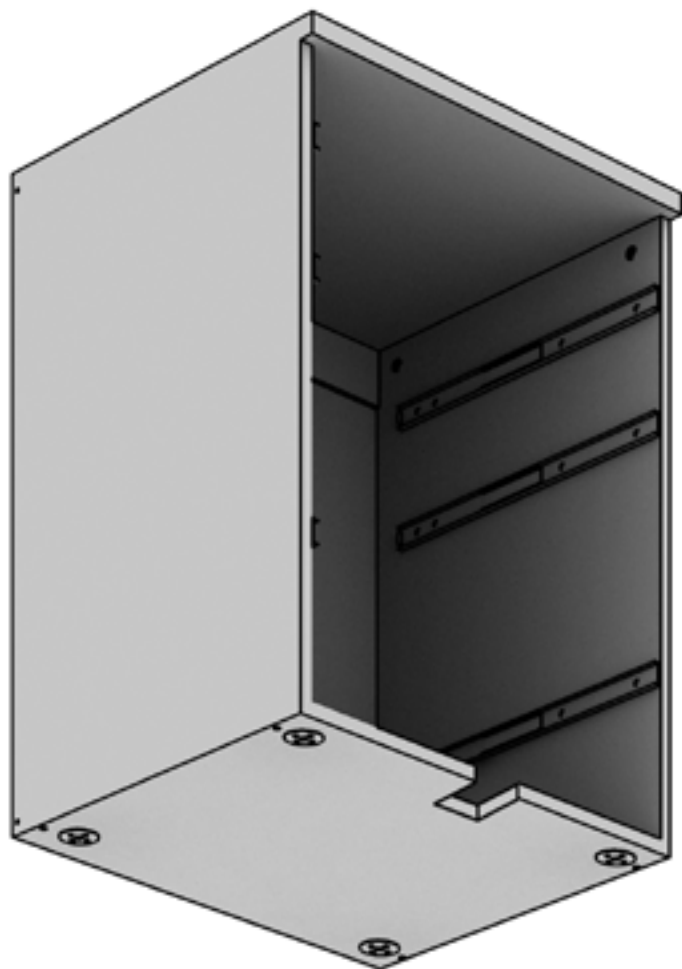


## STEP 4

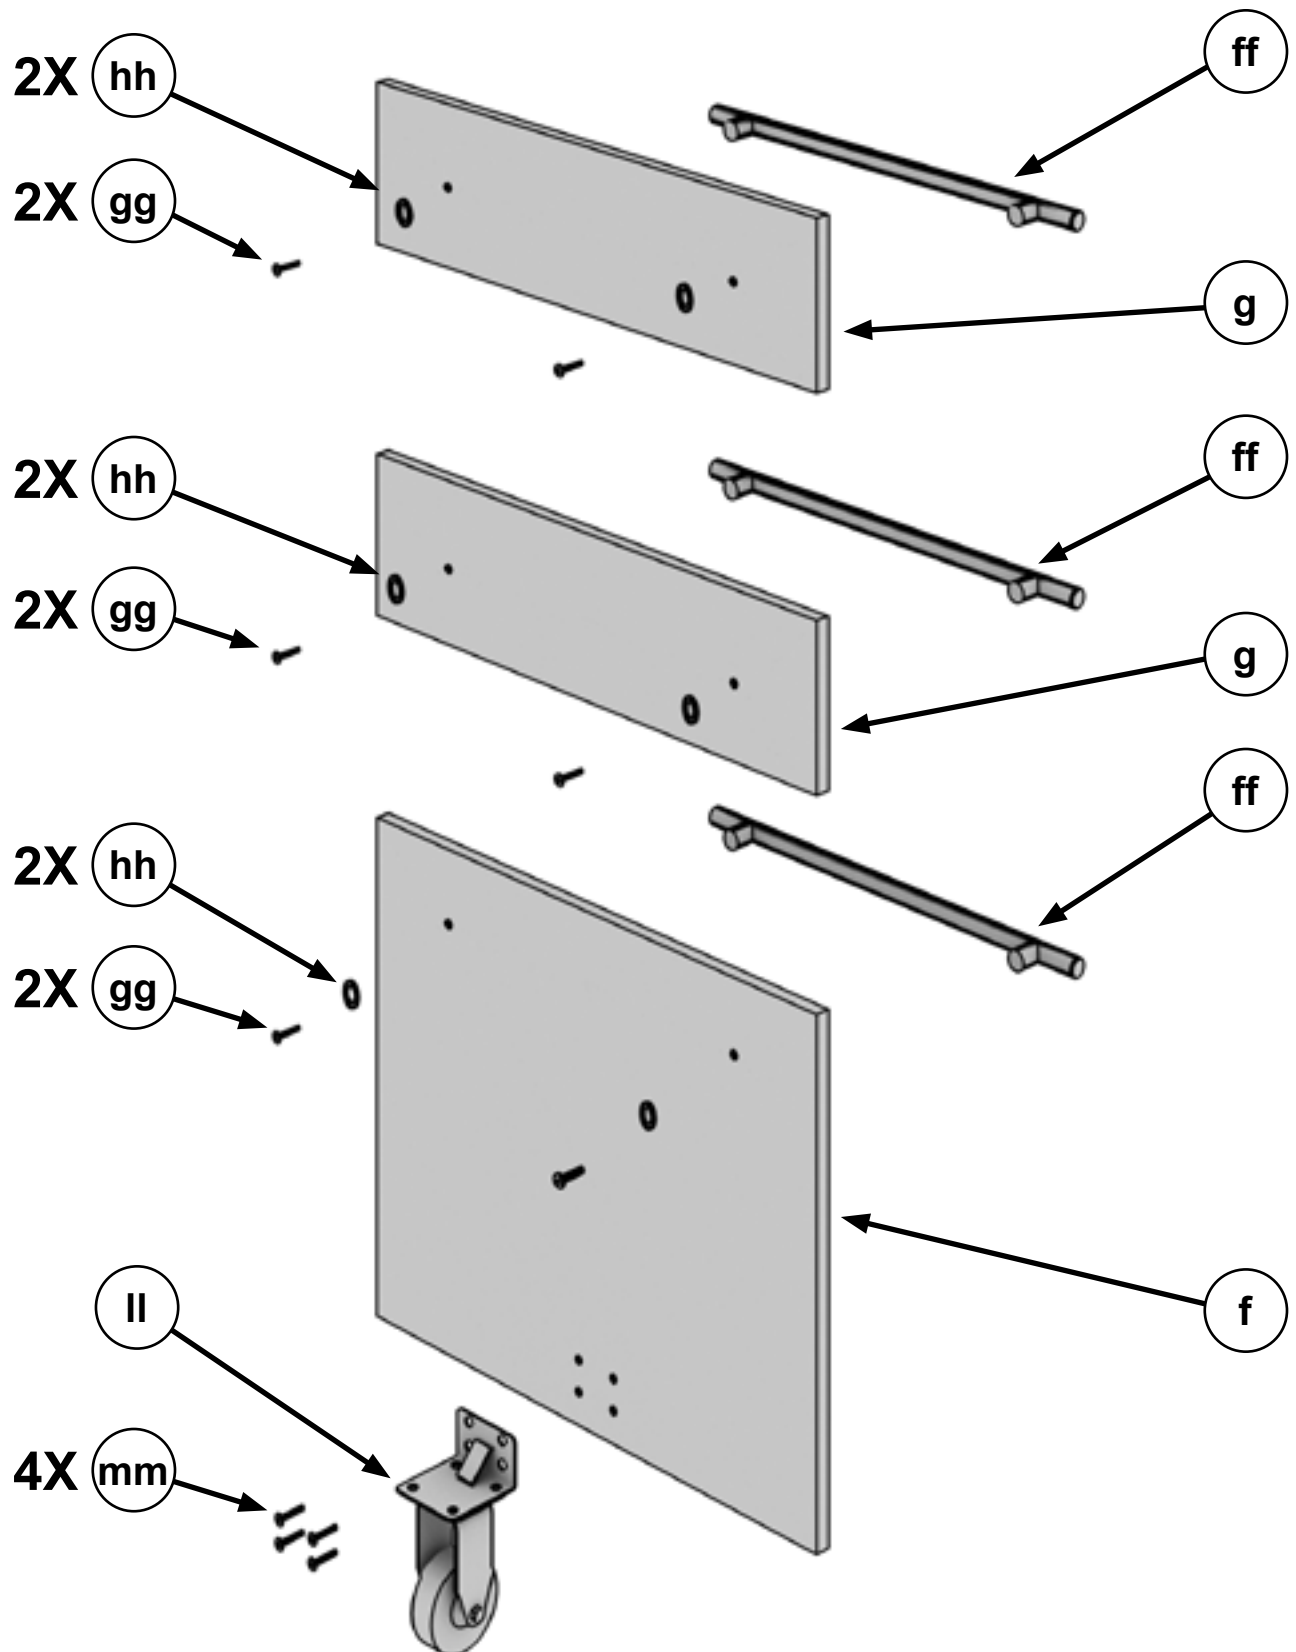




# STEP 5


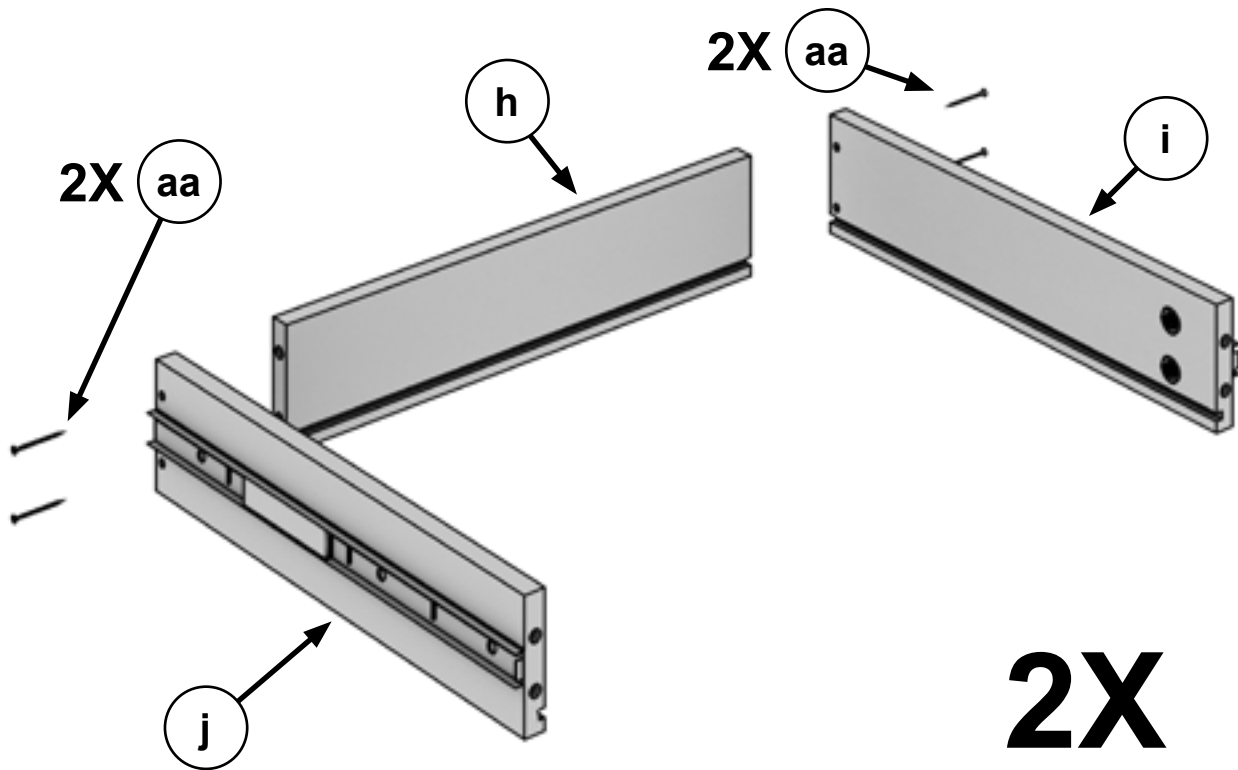


**2X**


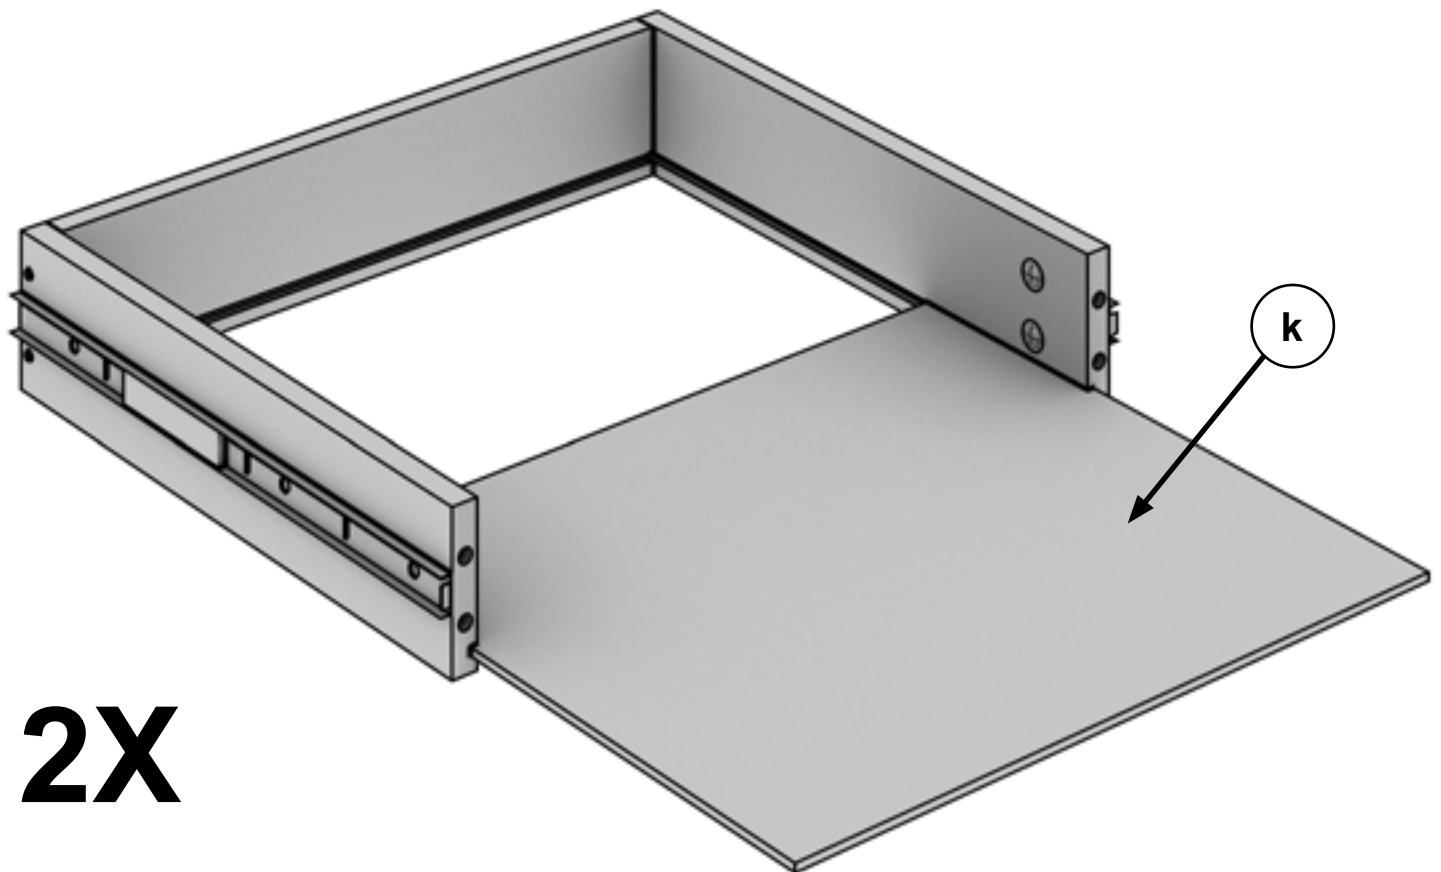


**2X**

## STEP 6

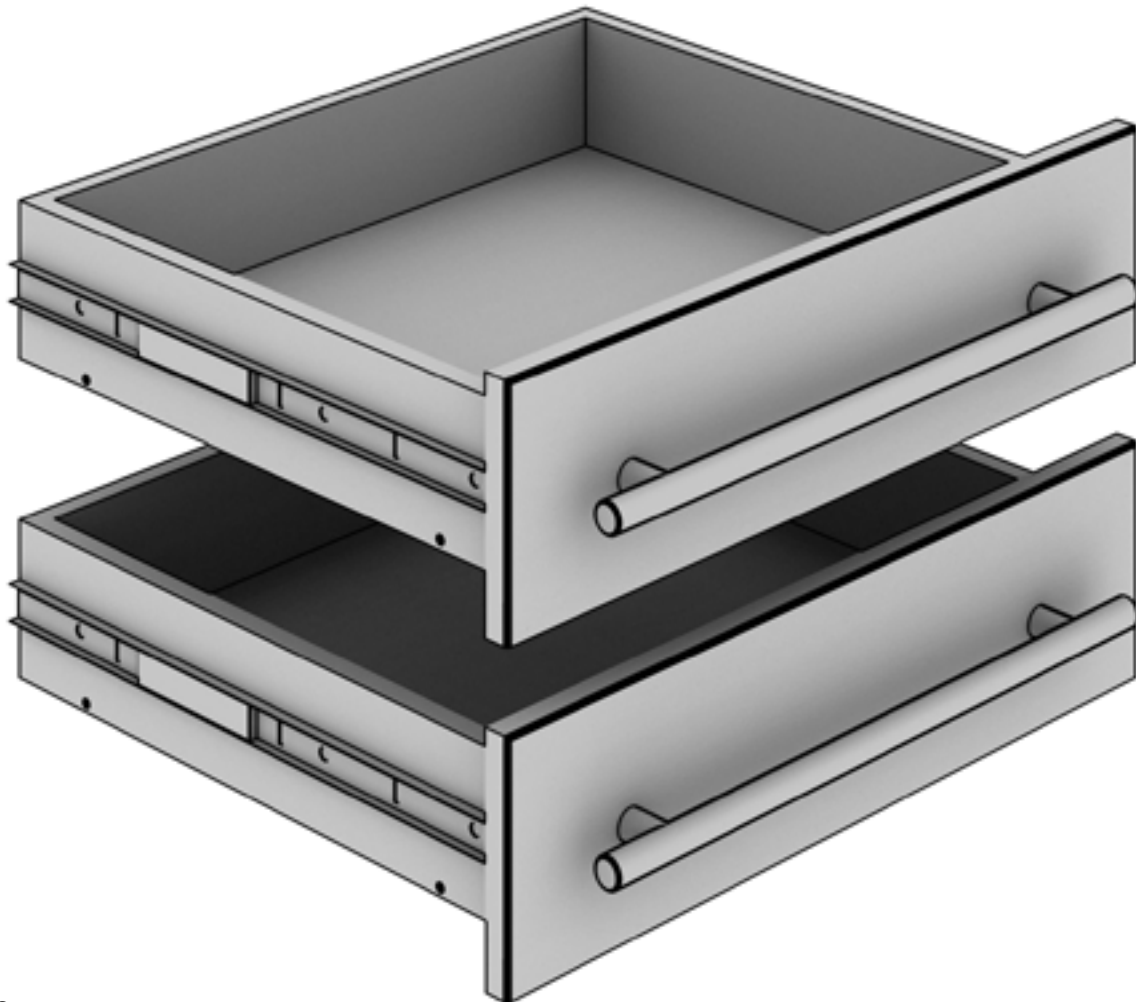
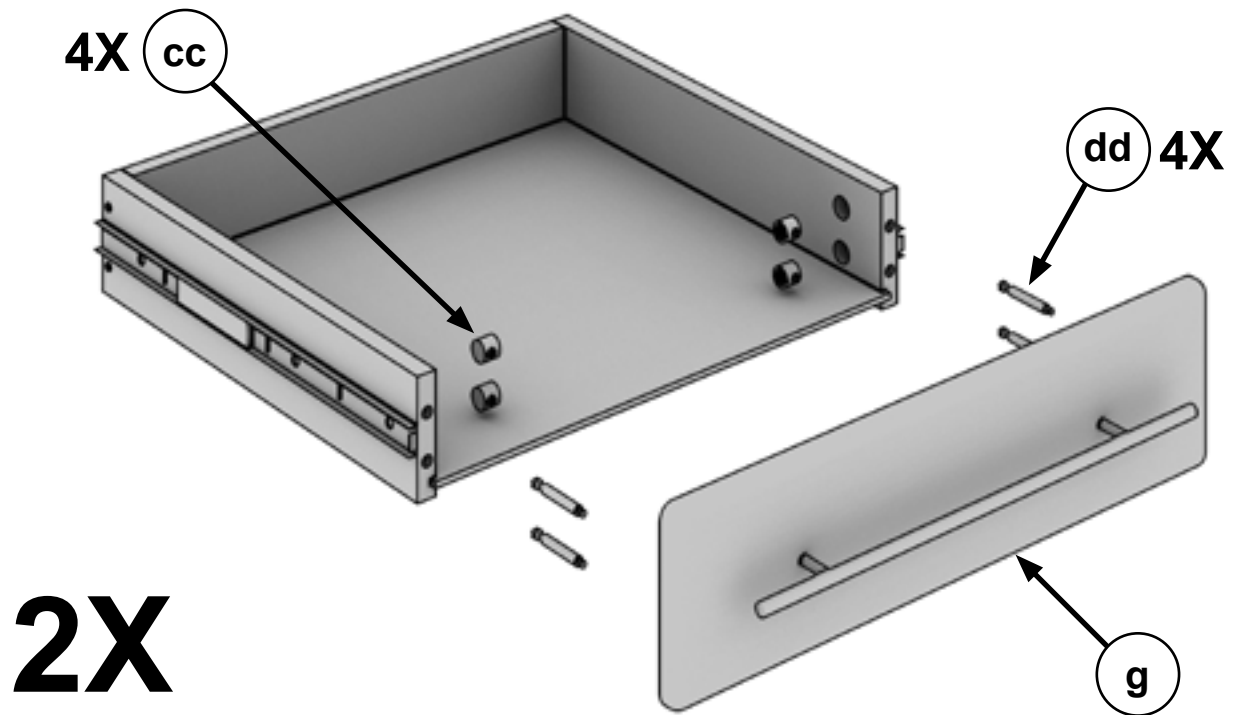


## STEP 7

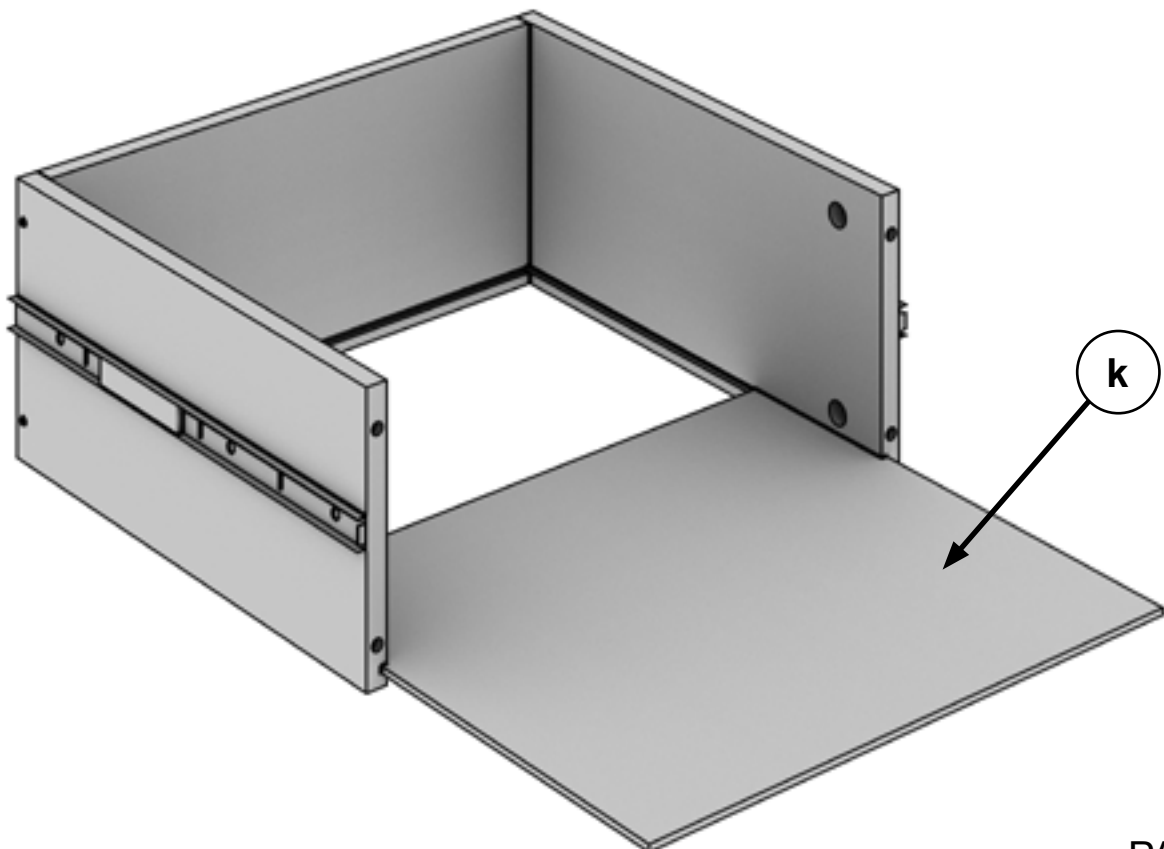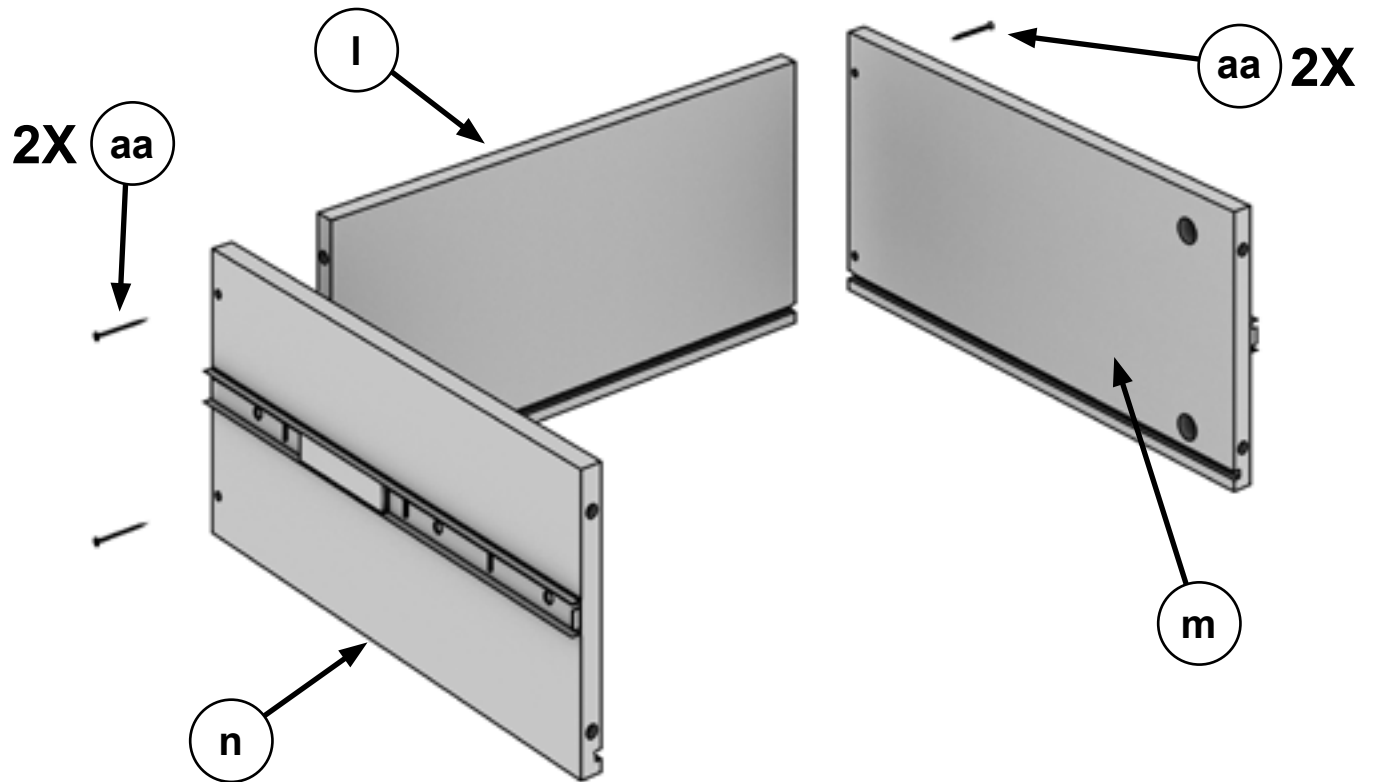

## STEP 8

4X (cc)

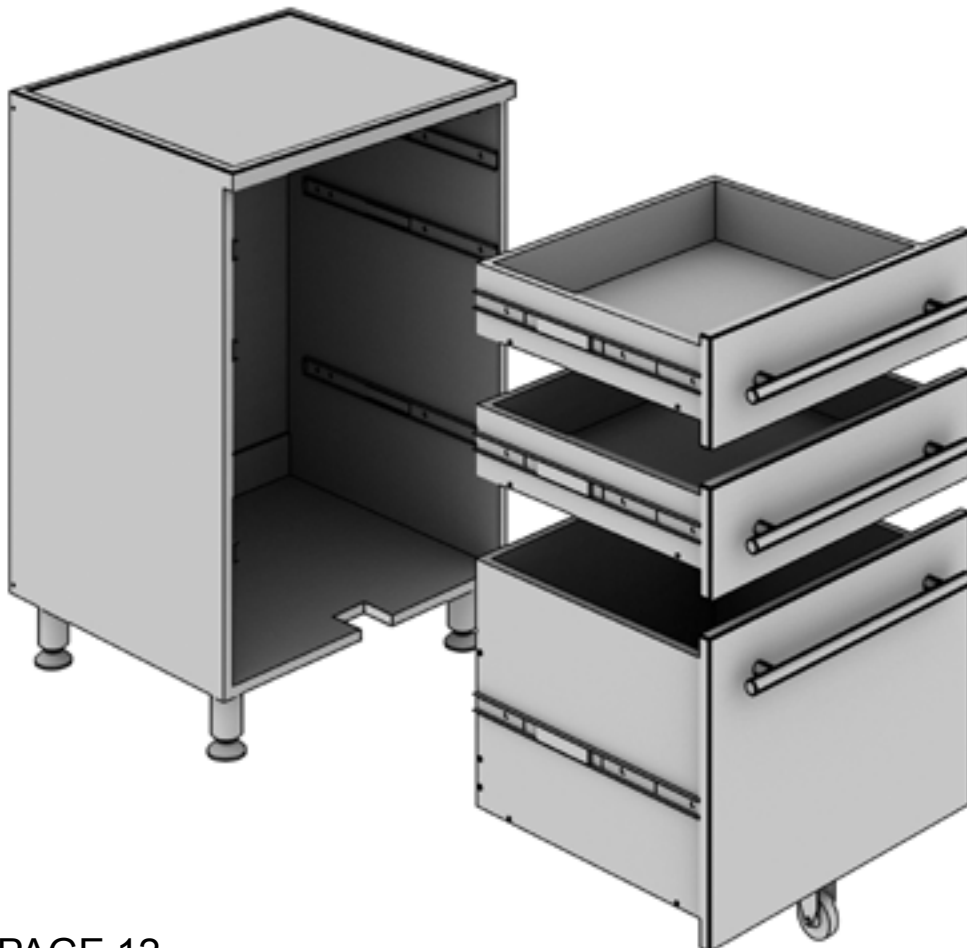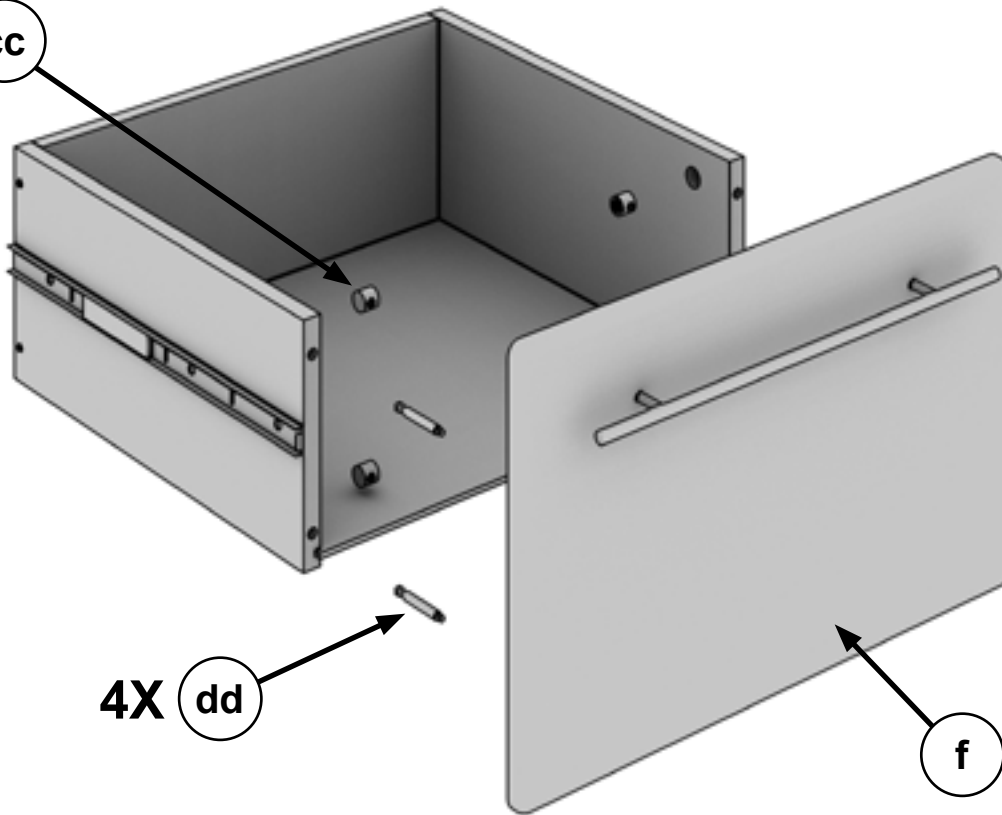

NOTE: Hold drawer at 45° angle and rotate gently into drawer glide.