


TRIM

three profiles do it all

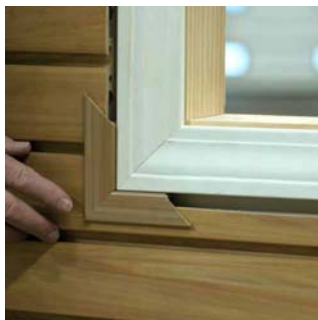

EXCLUSIVE

- Installs using exclusive peel and stick storeWALL SpeedBond™ acrylic adhesive
- Solid core technology for easy repair and low maintenance

STRONG

- Absorbs impact without shattering
- Withstands years of demanding garage use and abuse

VERSATILE

- Three multi-use profiles for every application
- Deal with any garage installation

ATTRACTIVE

- Your choice of solid core colors and woodgrains
- Elegant trim detail enhances installation

COST EFFECTIVE

- Cuts clean and easily without shattering with traditional wood working tools
- SpeedBond™ installation saves time
- Three profiles to simplify your inventory

TRIM

Modules and combinations

Flat
Large L
Small L




Butt joints
Flat



Inside corner
Small L & Flat


Install wall panels with a +1/8" gap.

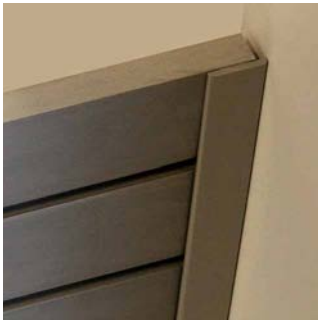

Corners and projections
Flat



Attach Small L with the face against the panel.

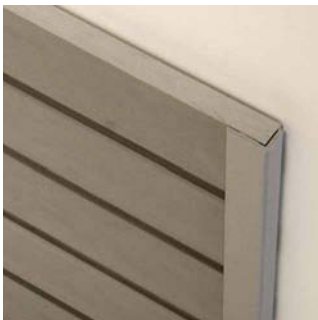

Panel end or picture frame an opening in storeWALL
Small L




Attach Flat to panel with the edge against the Small L.

TIP: The modular combination allows installation in out-of-plumb and out-of-square corners.



Outside corners
Large L

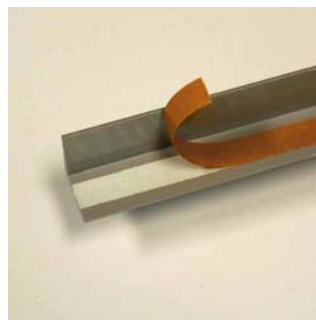

TIP: SpeedBond adhesive is applied to one side of flat and one leg of L modules. This allows for contraction and expansion of materials. For additional double sided tape see 3M VHB adhesive tape products.

TIP: Temperature for SpeedBond adhesive installation should be 50 degrees. Store trim at room temperature before installation. If the installation area, trim and wall panel is too cold use a hand held heater such as a hair dryer or torch to warm wall panel.

TIP: Apply firm pressure (15 psi) to SpeedBond to maximize adhesion. A laminate J-roller can be used.

TIP: SpeedBond is repositionable for 20 minutes and permanent in 24 hours.

TRIM

Modules and combinations

- Flat
- Large L
- Small L

It is expected that garage construction is out of square and out of plumb. The modular Trim combination provides the most professional result and easiest installation.



Flat, Small L and Large L trim can be used in combination.




Flat trim can be used to create corners.



TIP: Outlets and switches are common trim issues. Sizes are standard. Consider precutting a quantity of trim pieces to speed your job.


Also see Electric Box Extenders for switch and outlet alternatives.

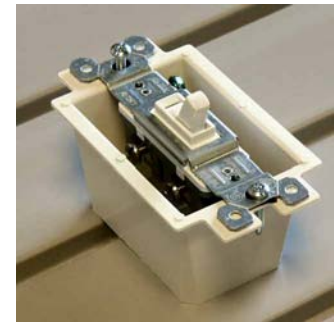

TIP: If the outside corner is out of plumb a rough mitre cut will hold a small joint which can be covered by the Large L trim.



Use a fine tooth plywood, plastic, laminate blade for extra clean cuts.

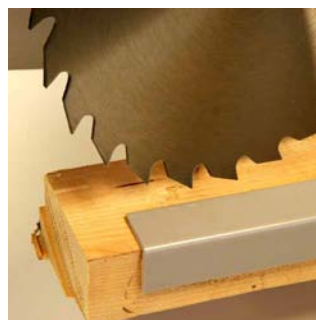

With a conventional blade use a sacrificial block for extra clean cuts.